

QUICK Start Guide

Device Overview

Thank you for choosing the Orbic JOURNEY Pro Lite.



USB Charger Port

Initial Phone Setup

Charging the Battery

Before turning ON the phone, charge the battery fully.

- 1. Insert the battery, making sure the gold contacts line up.
- 2. Push in and press down gently to secure.
- Place the back cover and press it down along the edges to secure.
- 4. Insert the small end of the USB cable into the phone.
- 5. Insert the larger end into the charger and plug the charger into an outlet.



Warning! Use only approved chargers with your phone. Incompatible chargers or tampering with the charging port could damage your phone and void the warranty.

SIM Card and microSD Card

SIM Card instructions

Your phone already has a SIM card installed. For optimal functionality of your new device, please use the pre-installed SIM card.

To insert a microSD Card,

- Turn off the phone, then remove the back cover and battery.
- Position the microSD card with the label side facing up and carefully slide into the microSD tray.

Turning the Phone ON/OFF

- Press and hold the End/Power Key a until the phone powers ON.
- Press and hold the End/Power Key
 until the diplay shows Restart and then select Power OFF.

Select Language

From the Home screen, press the **OK Key**, select **Settings** Select **Settings Personalization > Language > Language**.

- Press the Navigation Key
 to select the desired language preference.
- 2. Press the OK Key to confirm.

Connect to Wi-Fi

From the Home screen, press the OK Key , select Settings
 > Network & Connectivity > Wi-Fi.

- 1. Press the OK Key to select Wi-Fi.
- 2. Press the Navigation Key O to select ON/OFF.
- 3. Press the OK Key to turn ON Wi-Fi.
- Using the Navigation Key Select available networks
 press the OK Key to select all available network list
 select the desired network > press the OK Key to configure the access point, enter the password, then press the Right Soft Key to connect your phone.

Locking and Unlocking Your Screen

To keep your phone contents secure and protect your privacy, you can lock the phone screen by creating a password.

- From the home screen, press the OK Key , select Settings > Privacy & Security > Screen lock.
- Press the OK Key and select ON to enable screen lock.
- 3. Enter a password and press the **Right Soft Key** to **Create.**

Navigating Your Phone

You can navigate with your phone's software by pressing the key that corresponds with the action you want to take or using the **Navigation Key** to scroll and the **OK Key** to select a highlighted item.

For example:

- Press the Left Soft Key
 to select the item displayed at the bottom left of the screen.
- Press the Right Soft Key to select the item displayed at the bottom right of the screen.
- Press the Keypad Key that corresponds to the item you want in a displayed list.
- Press the top, bottom or sides of the Navigation Key O to move the cursor, then press the OK Key to select the item displayed at the bottom center of the screen.

Home Screen Navigation

From the Home Screen

- 1. Press the OK Key
 - To access the application list.
 - To confirm an option.
- 2. Press the Left Soft Key 🚍 to access Notifications.
- 3. Press the **Right Soft Key** to access **Contacts**.
- 4. Navigation Key
 - Press Up > Ringtones & Alerts.
 - Press Down > Clock.
 - Press Left Navigation Key > Calculator.
 - Press Right Navigation Key > Calendar.

Making a Call

From the Home Screen

- 1. Dial the desired number using the numeric keypad.
- 2. Press the Call Key C or the OK Key to make the call.

From Contacts

- From the Home screen, press the Right Soft Key
 to access Contacts.
- Choose the contact you want to dial > press the Call Key C or the OK Key to make the call.

Answering/Rejecting Calls

- Open the flip to answer, if Settings > Personalisation
 Answer Mode > Flip open to answer is ON.
 -Or-
- 2. Press the Left Soft Key 🚍 or Call Key 🖨 to answer.
- Press the Right Soft Key
 or the End/Power Key
 to decline.
- Press the OK Key to reject the call by sending a preset message.

Voicemail

Long press 1 launches voicemail.

Voicemail Setup

To Setup Voicemail

- 1. Dial *86 and press the Call Key 🗖 or the OK Key 📕.
- 2. After the greeting, follow the instructions provided.

Check Voicemail

From your phone

- Dial *86 and press the Call Key Co or the OK Key .
- Follow the instructions.

From other phones

- · Dial your wireless number.
- · After the greeting, follow the instructions provided.

Text and Picture Messaging

Sending a Text Message

From the Home screen, press the **OK Key** > select **Messages**.

- 1. Press the Left Soft Key Control to write a New Message.
- Enter the phone number of the recipient in the To bar or press the Left Soft Key to add recipients from Contacts.
- Use the Navigation Key
 [−] to go to the SMS bar to enter the text of the message.
- 4. Press the **OK Key** to **SEND** the text message.

Sending a Multimedia Message

Multimedia enables you to send video clips, photos, contacts and sounds to other compatible phones and email addresses.

Bluetooth Connectivity

Turn ON/OFF

From the Home screen, press the **OK Key** > select **Settings** > **Network & Connectivity > Bluetooth**.

- 1. Press the **OK Key** to enter Bluetooth.
- Press the Navigation Key O to select ON, then press the OK Key to turn ON Bluetooth.

Pairing Devices

Press the **OK Key** to enter **Nearby devices** list > use the **Navigation Key** to select the required device > press the **OK Key** to confirm > press the **Right Soft Key** to **Pair.** You can review the paired devices by pressing **Bluetooth** > Paired devices.

Notification and Status Icons

	Battery	**	Vibrate
(4)	Charging battery	¢	Phone
	Empty battery	▲	Emergency Alert
t	System Update	►	Sound Recorder
.ull	Signal Bar	മ	New Voicemail
þ	Messages	ø	Settings
**	Bluetooth	4G범	4G LTE

Verizon Wireless

Your wireless device and third-party services

Verizon Wireless is the mobile carrier associated with this wireless device, but many services and features offered through this device are provided by or in conjunction with third parties. Verizon Wireless is not responsible for your use of this device or any non-Verizon Wireless applications, services and products, including any personal information, you choose to use, submit or share with others. Specific third-party terms and conditions, terms of use and privacy policies apply. Please review carefully all applicable terms conditions and policies prior to using this wireless device and any associated application, product or service.

HAC Information

Hearing aid compatibility information

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer technologies that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Ask your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, ask your service provider or phone retailer.

Support and More

From your computer, visit verizon.com/Support

Customer service Call: 800.922.0204 X(Twitter): @VerizonSupport Facebook: @Verizon



Download a user Guide from verizon.com

Product Safety and Warranty Information For full details, visit **Orbic.us**



