



# Quick Start Guide

## Table of Contents

Getting Started.....	3
Device Overview.....	4
Installing a SIM card.....	5
Charging the Battery.....	6
Powering ON/OFF.....	7
Using On-Screen Gestures.....	8
Lock and Unlock the Tablet.....	9
Calling and Texting.....	10
Camera.....	10
Google™ Play Store.....	12
Installing Apps.....	12
Uninstalling Apps.....	13
Improving Accessibility.....	13
Connect to Wi-Fi.....	14
Support and More.....	15

## Getting Started

Thank you for choosing the OrbicTab 10R.

This guide helps you to get started with your device for the first time.

The Tab10R has built-in 5G capabilities, that can be utilized to connect to the internet anywhere and anytime.

## Device Overview



**NOTE :** The screen images and icons seen here are for reference only since the software is constantly evolving.

The Tab 10R is bundled with a stylus; a digital pen tool that is used for navigating, drawing pictures, taking notes, and being more precise when selecting items.

## Installing a SIM Card


Insert the SIM tool in the SIM pinhole to release the tray (as shown in the figure below). Place the SIM card in the slot with the gold contacts facing down and close the tray. Your device is now ready to be used.

The SIM tray also has a slot for microSD card that can be inserted following the steps mentioned above.

**NOTE :** The microSD card is sold separately.



## Charging the Battery

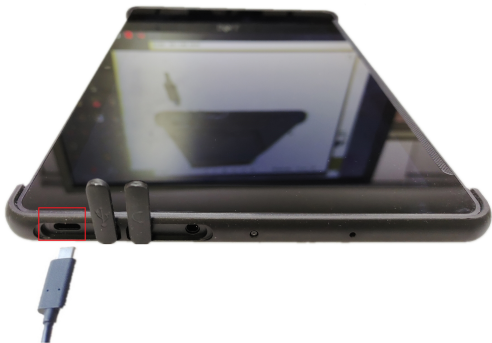

Before using your Tablet, you must fully charge the battery ( 100% ).

1. Insert the smaller end ( USB Type C ) into the Tablet and the larger end ( USB Type A ) into the charger adapter.
2. Plug the charger into an electrical outlet.

**Warning!** Use only approved chargers with your device. Incompatible chargers that are tampered with may damage the device and void the warranty.

## Powering ON/OFF



### To Power ON/OFF Your Tablet

Press and hold the **Power/Lock** button and follow the prompts.

## Using On-Screen Gestures

Use the on-screen gestures to move around the screen; open menus, select items, zoom in or out on web pages, and more.

- **Tap** - To open an app, select a menu item, press an on-screen button, or to enter a character using the keyboard on the screen, tap it with your finger.
- **Touch and Hold** - Touch and hold an item or the screen for more than 2 seconds to access available options.
- **Drag** - To move an item, touch and hold it and drag it to the target position.
- **Double-Tap** - Double-tap on a web page or image to zoom in. Double-tap again to return.
- **Swipe** - Swipe to the left or right on the screen to scroll left or right. Swipe upwards or downwards to scroll through a web page or a list of items.
- **Spread and Pinch** - Spread two fingers apart on a web page, map, or image to zoom in on a part. Pinch to zoom out.
- **Stylus** - The stylus on your tablet allows you to draw pictures, take notes, and make more precise selections.



 
## Lock and Unlock the Tablet

### To Lock the Screen


- Press the **Power/Lock** button. This action prevents the accidental keypress.

### To Unlock the Screen

- Press the **Power/Lock** button and swipe up on the screen.

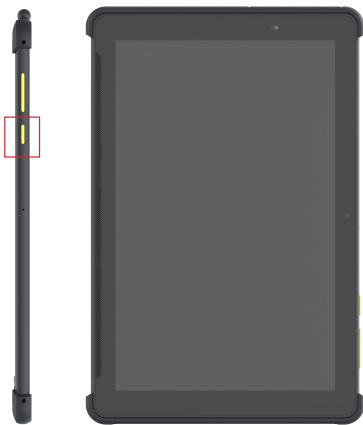




## Calling and Texting

Calling / Texting is supported by the Message+  app when paired with an active Verizon device.


## Camera

### Take pictures with the Camera app.

 1. From the Home screen tap  .
2. Aim the camera at the subject using the Tablet's main display screen as a viewfinder.
3. Pinch the screen to zoom in or pinch open to zoom out.
4. Before taking a picture, you can tap on the screen icons to access various camera options and settings.
5. Tap  to click a photo. You can also use the volume keys to click a photo.

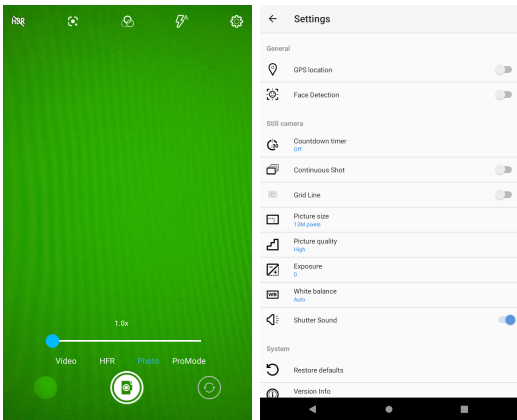

## To Record Videos with the Camera app.

1. From the Home screen tap .
2. Tap **video** on the screen to switch to the video mode.
3. Aim the camera at the subject using the Tablet's main display screen as a viewfinder.
4. Pinch the screen to zoom in or pinch open to zoom out.
5. Tap the white button to start recording the video.

# Google™ Play Store

Find and download your favorite apps, movies and TV shows, music, books, magazines, and games.

Google™, Google Play, and Android™ are trademarks of Google™ LLC.

## Installing Apps

Your Tablet comes preloaded with several applications, and you can download many more from the Play store.

### Play Store

Play Store is a pre-installed application on Android™ devices.

1. Search or browse for applications.
2. Select the desired app, download, and install.
3. Follow the on-screen instructions to complete the installation.

You can also uninstall, update, and manage your downloaded apps.

## Uninstalling Apps



Steps to uninstall the downloaded apps.

**NOTE:** Preloaded apps cannot be uninstalled.



1. Touch and hold the app icon that you want to uninstall.
2. Tap **Uninstall** and follow the prompts to uninstall the app.
3. Touch **OK** to confirm or **Cancel** to stop the uninstallation.

## Improving Accessibility

Accessibility services are special features that allow those with specific physical disabilities (impaired vision, hearing, or reduced dexterity) to use the device more easily.

1. Touch **Home** key  > swipe up for apps > **Settings**  > **Accessibility**.
2. Tap a category and set the desired options.

## Connect to Wi-Fi

1. Touch the **Home** key  > swipe up for the apps > **Setting**  **Network & Internet** > **Wi-Fi**.  
Make sure Wi-Fi is ON.
2. Select **Network** or **Add Network**.
3. Enter the network SSID and other required information.
4. Tap **Connect**.

## Support and More



**Get help using your device** and download a User Guide from your computer, visit

<https://orbic.us/pages/support>



**Customer service**

Call **1-877-872-4555**



OT10\_QSG\_VZ\_V16